


STEP (7) - CONTINUED

7F. Open the door. Position the continuous stop on the adjacent pilaster so that the top of the continuous stop lines up with the top of the front door face.

7G. Repeat for each door and pilaster.

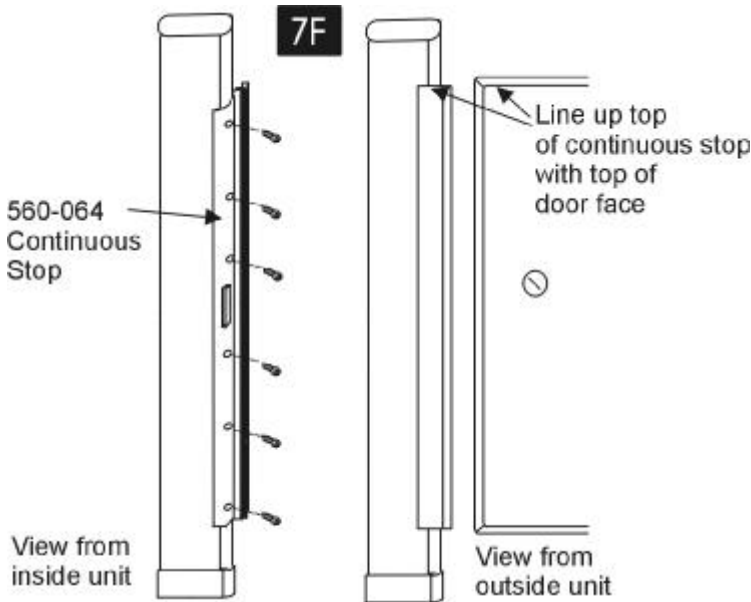


STEP (8) - COMPLETE PANEL INSTALLATION

8. Adjust leveling devices to level all panels, doors and pilasters. Tighten all 0.25"-20 x 0.5" assemblies. Drill all panel holes not previously drilled. Insert and tighten #12 x .625" (15.7 mm) Robertson head screws.


STEP (9) - INSTALL DOOR LATCH

9. Press fit the rotary latch in the door. Make sure that the slotted escutcheon is on the outside of the unit and the handle is on the inside of the unit.

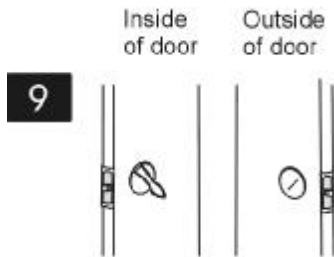


STEP (10) - INSTALL COAT HOOK AND BUMPER

10. Install the coat hook and bumper 6" below the top of the door and locate it so that when the door is opened the bumper makes contact with the adjacent panel. Install with a #25 drill bit and #12 x 0.625" (15.7 mm) Robertson head sheet metal screws.

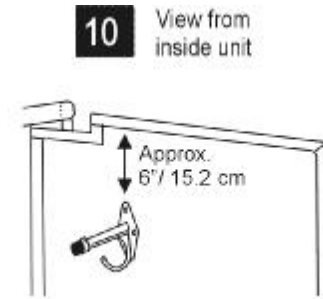

STEP (11) - COMPLETE HEADRAIL INSTALLATION

11. Put the side headrail in place and secure at each end using #12 x 0.625" (15.7 mm) slotted head sheet metal screws. Insert the headrail end cap if required.

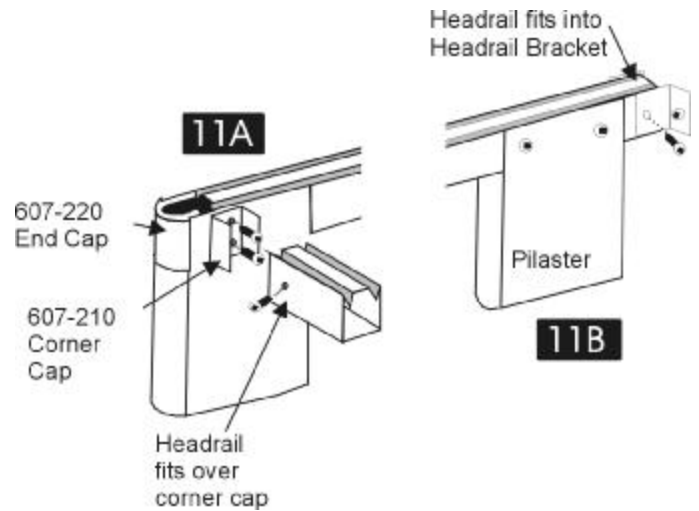

STEP (12) - ADJUST DOOR ANGLES

12. Set doors at the required angle, loosen the nut of the male cam assembly, set the door at the required angle, then tighten the nut.

hadrian

email: mail@hadrian-inc.com • web site: www.hadrian-inc.com

IN CANADA & AREAS OTHER THAN U.S.A.: Hadrian Manufacturing Inc., 965 Syscon Road, Burlington, Ontario, Canada L7L 5S3

telephone: (905) 333-0300 • fax: (905) 333-1841 • Canada toll free fax: 1-888-817-7701

IN THE U.S.A.: Hadrian Inc., 8671-A Tyler Blvd., Mentor, Ohio, U.S.A. 44060

telephone: (440) 974-7120 • fax: (440) 974-7122 • U.S. toll free fax: 1-800-536-1469

Printed in Canada